

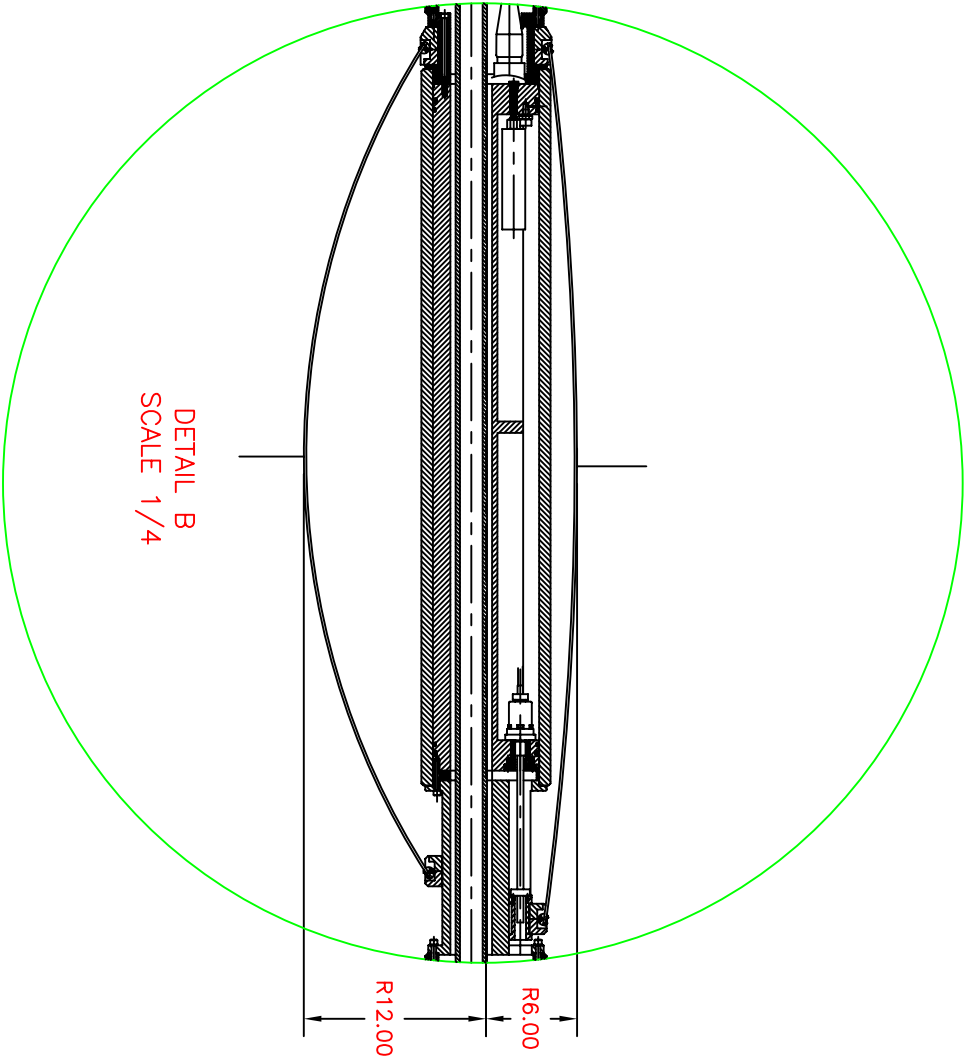
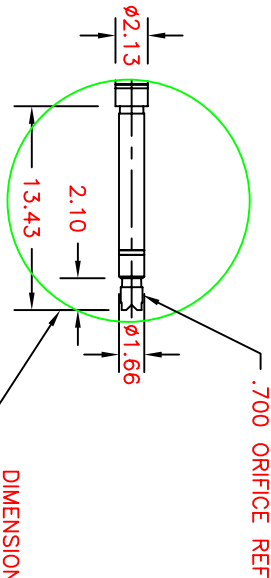


ATTACH WITH WHITE DRILLER TAPE:
USE 2" HOLDER (5900C188) WITH
R2.5 TUBE CLAMP (5900C187)

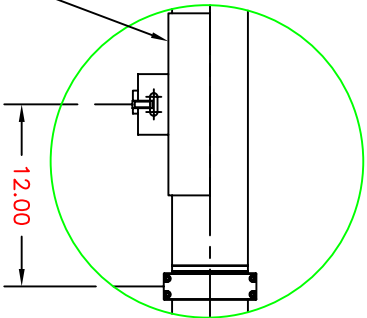

ATTACH WITH WHITE DRILLER TAPE:
USE 1" HOLDER (5900C188) WITH
R2.5 TUBE CLAMP (5900C187)

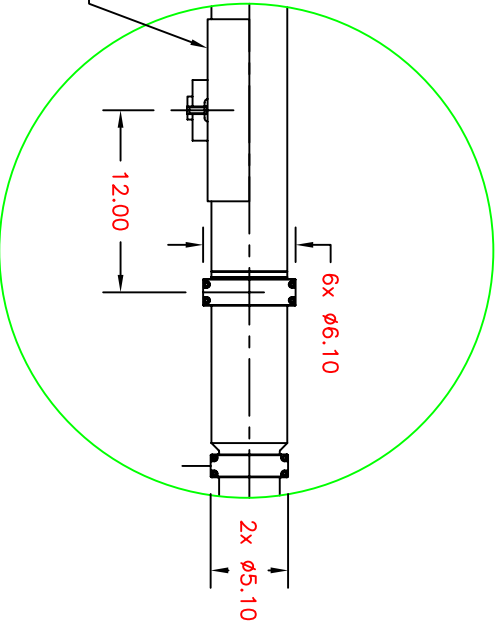

PSI DRAWINGS ARE MODELED AT FULL SCALE. SCALE SHOWN IN SCALE BOX IS VALID ONLY WHEN DRAWING IS PLOTTED AT FULL. DO NOT SCALE DRAWING.

DATE: 10/2/2008
DRAWN BY: JMC
CHECKED BY: JMC
APPROVED BY: JMC

REV	DATE	DESCRIPTION	BY	CHKD	APPD
1	10/2/2008	1.00000186 SENSOR HOLDER ASSEMBLY	JMC	JMC	JMC
2	10/2/2008	2.00000186 SENSOR HOLDER ASSEMBLY	JMC	JMC	JMC
3	10/2/2008	3.00000186 SENSOR HOLDER ASSEMBLY	JMC	JMC	JMC

REV	DATE	DESCRIPTION	BY	CHKD	APPD
1	10/2/2008	1.00000186 SENSOR HOLDER ASSEMBLY	JMC	JMC	JMC
2	10/2/2008	2.00000186 SENSOR HOLDER ASSEMBLY	JMC	JMC	JMC
3	10/2/2008	3.00000186 SENSOR HOLDER ASSEMBLY	JMC	JMC	JMC

REV	DATE	DESCRIPTION	BY	CHKD	APPD
1	10/2/2008	1.00000186 SENSOR HOLDER ASSEMBLY	JMC	JMC	JMC
2	10/2/2008	2.00000186 SENSOR HOLDER ASSEMBLY	JMC	JMC	JMC
3	10/2/2008	3.00000186 SENSOR HOLDER ASSEMBLY	JMC	JMC	JMC